

## THE REPLACEMENT BODY STOCKING INSTALLATION MANUAL

( for the damaged fabric on the AlvaForm only )

### INSTALLATION PROCESS FOR TORSO

#### Step 1

Stretch the top body stocking over the form.



#### Step 2

Make sure the top body stocking is fully stretched on.



#### Step 3

Loosen the four screws of the metal arm plates. Make a 3~4mm gap between the metal arm plate and the AlvaForm.  
( Don't completely remove the screws from the metal arm plate )



### INSTALLATION PROCESS FOR ARMS


#### Step 1

Stretch the body stocking on the AlvaForm Arm.




#### Step 2

Loosen the four screws of the metal arm plates. Make a 3~4mm gap between the metal arm plate and the AlvaForm.  
( Don't completely remove the screws from the metal arm plate )

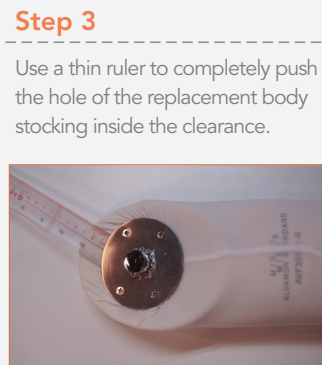

#### Step 3

Use a thin ruler to completely push the hole of the replacement body stocking inside the clearance.

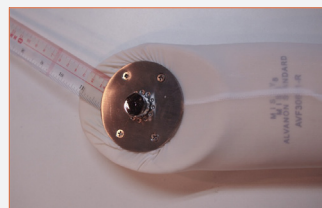

#### Step 4

Fasten the screws of the metal arm plate to press the replacement body stocking, the position of the replacement body stocking is fixed.



#### Step 4

Use a thin ruler to completely push the hole of the replacement body stocking inside the clearance.



#### Step 5

Fasten the screws of the metal arm plate to press the replacement body stocking, the position of the replacement body stocking is fixed, and then repeat the process at the other side of arm hole.



**Congratulations!**  
You have successfully installed replacement body stocking.

#### Step 5

Repeat the process at the other side of arm.

